

What to do if...

What to do if...



A tire punctures

P. 487

If you have a flat tire



The engine does not start

P. 496

If the engine will not start

P. 86

Engine immobilizer system

P. 502

If the vehicle battery is discharged



The shift lever cannot be moved out of P

P. 497

If the shift lever cannot be shifted from P



The display on the engine coolant temperature gauge flashes

P. 505

If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 498

If you lose your keys



The battery runs out

P. 502

If the vehicle battery is discharged



The doors cannot be locked

P. 46

Doors



The horn begins to sound

P. 88

Alarm



The vehicle is stuck in mud or sand

P. 508

If the vehicle becomes stuck



A warning light or indicator light comes on

P. 463

If a warning light turns on or a warning buzzer sounds...



■ Warning lights



Brake system warning light

or



P. 463



Malfunction indicator lamp

or



P. 464



ABS warning light

or



P. 464



Driver's seat belt reminder light

P. 466



Front passenger's seat belt reminder light

P. 466



Low fuel level warning light

P. 466



Master warning light

P. 466



SRS warning light

P. 464



Open door warning light

P. 466



Charging system warning light

P. 464



Slip indicator

P. 464



Electric power steering system warning light

P. 464



Pre-collision system warning light

P. 464



Tire pressure warning light

P. 466



A warning message is displayed

P. 473

If a warning message is displayed